


Window sills - assembly tips

Step 1

Cut the window sill to the desired length.

! Attention when cutting to length:

Finished dimension for window sill = clear installation dimension minus 6 mm
(for 2 pcs. side panels)

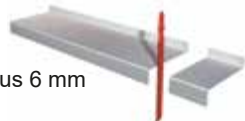

Step 2 (optional for EIFS)

Glue the small butyl strips from the driving rain sealing set to the head pieces of the side window sill ends (side parts).




Step 3

Put on the matching color side parts and press it firmly for a flush finish.



Step 4 (optional for EIFS)

Cut two butyl strips from the driving rain sealing set and stick them on the front and side at the transition from the side part to the window sill. Make sure that the strips overlap and shape them well so that they are tight.

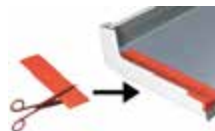

Step 5

Adjust the sound insulation tape and rubber seal to the length of the window sill and fasten both to the window sill.



Step 6

To attach the window sill, holes with a diameter of 4 mm and a distance of approx. 300 mm are first pre-drilled in the window sill. Now use the stainless steel window sill screws. You can then cover them with matching colored caps.

